



Linux 12^{X64}

with Keyboard Cover

Thank You.

 
Thank You for choosing the Linx 12X64 as your new tablet.

This quick guide will help to give you an overview of your new tablet, its features, and explain how to setup and get going.

Contents.

Product overview.	5	Battery and Charger Safety	19
Instructions for use.	8	Small children	19
Check the package contents	8	Medical devices	20
Charging your tablet.	8	Implanted medical devices	20
Rechargeable Lithium-ion Battery	8	Hearing	20
Using your tablet.	9	Warranty	21
Turning your tablet on	9		
Putting your tablet into Sleep Mode	9		
Turning your tablet off	9		
Emergency reboot	9		
Increasing and decreasing the volume	9		
Using headphones with your tablet	9		
Installing a Micro SDHC/XC card	9		
Using the kickstand	10		
Using Windows 10 Home	10		
Using the Keyboard Cover	11		
Connecting to your tablet	11		
Using the function keys	12		
Using the Touchpad	13		
Technical information.	15		
Important safety information.	18		
General use	18		
Recycling	19		
Disposal of Waste Electrical & Electronic Equipment (WEEE)	19		
Digital Rights Management	19		
Rechargeable Lithium-ion Battery	19		

Product overview.

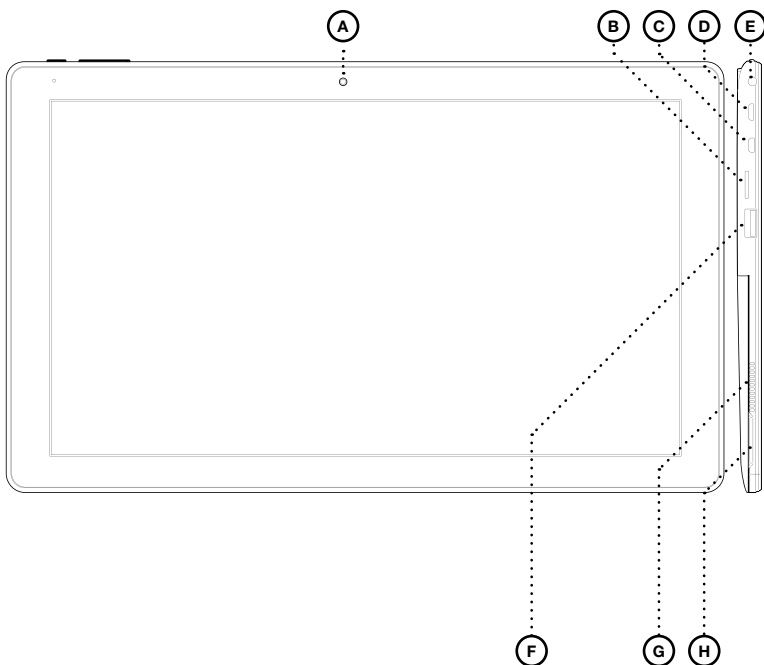


Specification.

A	2.0 Megapixel Front Camera
B	Micro SDHC / SDXC Card Slot
C	Micro HDMI 1.4
D	Micro USB (Type-B)
E	3.5mm Headphone Port

F	Full-size USB 3.0 (Type-A)
G	Loudspeaker
H	Thumbslot for kickstand access

 Product overview.

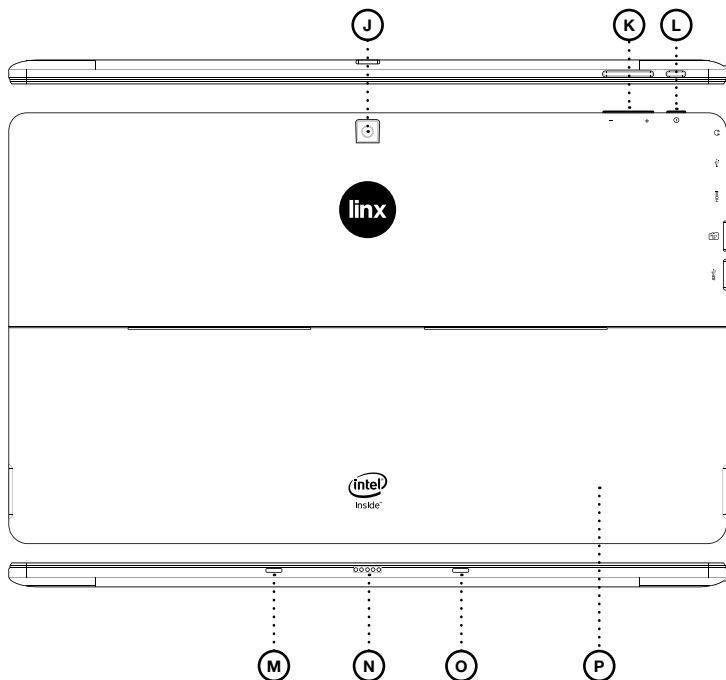


Specification.

J	2.0 Megapixel Rear Camera
K	Volume Up / Down
L	Power / Sleep
M	Keyboard Mount Point

N	5-Pin Connector for Keyboard Cover
O	Keyboard Mount Point
P	Kickstand

 Product overview.

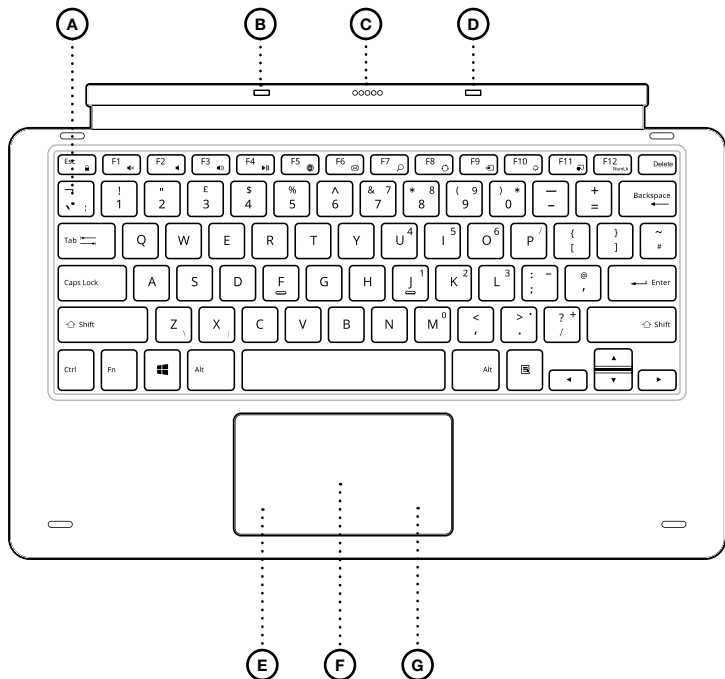

Specification.

A	QWERTY keyboard with island-style keys
B	Keyboard Docking Mount
C	5-Pin Connector for Keyboard Cover
D	Keyboard Docking Mount

E	Left Mouse Click
F	Trackpad
G	Right Mouse Click

Instructions for use.

Check the package contents.


The package contains:

- 1 x Linx 12X64 Tablet
- 1 x Linx 12XKDB Keyboard Cover
- 1 x Mains Charger with Micro USB cable
- 1 x User Guide


Charging your tablet.

Your battery has been partially charged at the factory, but you may need to recharge it before you can switch the tablet on for the first time.

Note: It is recommended to recharge the battery of the tablet fully before turning on for the first time.

 **Important:** Use only the provided or approved chargers or cables with this tablet.


1. Plug the Mains Charger into a compatible wall socket.

 **Important:** Please ensure the power at the wall socket is switched **off**.

3. Connect the Mains Charger to your tablet using the integrated Micro USB cable.

4. Turn the power at the wall socket on, your tablet should now begin to charge. The power indicator LED will light up on your tablet when charging.

When the battery is full, disconnect the charger from the tablet, then from the wall outlet.

Note: To check the current charge level of the battery, press the  icon located at the bottom right of the screen.

Note: You don't need to charge the tablet for specific length of time, and you can use the tablet while it is charging.

Note: If the battery is completely discharged, it may take several minutes before the tablet can be used.

Rechargeable Lithium-Ion battery

Your tablet has an internal Lithium-ion polymer battery which should last the lifetime of the product.

If you suspect that the battery is dead, try charging it several times and follow the steps for charging your tablet.

- Do **NOT** attempt to change the battery yourself.
- **CAUTION:** Danger of explosion if batteries are incorrectly replaced.
- **NEVER** use or charge the battery if it appears to be leaking, discoloured, deformed or in any way abnormal.
- **NEVER** expose the battery to any liquid.
- **NEVER** expose the battery to excessive heat such as direct sunlight or fire.
- **NEVER** throw batteries in a fire or attempt to open the outer casing.
- Batteries are harmful if swallowed, so keep away from and out of reach of infants and young children.

Using your tablet.

Turning your tablet On

To turn your tablet on, press **and hold** the Power/Sleep button and the tablet will begin to power up.

Putting your tablet into Sleep mode

To put your tablet into Sleep mode, press the Power/Sleep button once. The screen should switch off and your tablet will be in Sleep mode.

To wake the tablet from Sleep mode, press the Power/Sleep button once. The screen should wake up and display the lock-screen.


Turning your tablet Off

To turn your tablet off, press **and hold** the Power/Sleep button until you are prompted with the 'Slide to shut down your PC' message. Slide and drag your finger down the screen to begin the shut down process and turn off your tablet.

Emergency reboot

To reboot your tablet if the screen becomes unresponsive, press **and hold** the Power/Sleep button for approx. 10 seconds until the screen turns off.

Note: Leave the tablet for 15 seconds before trying to reboot the tablet.


 **Important:** Avoid powering the tablet down by using the emergency reboot wherever possible. Always try to shut down your tablet using the correct shut down method to avoid loss or damage to data.

Increasing and decreasing the volume

To increase the volume level on your device, press the Volume up button. Repeatedly press the Volume up button until the desired volume is reached.


To decrease the volume level on your device, press the Volume down button. Repeatedly press the Volume down button until the desired volume is reached.

Using headphones with your tablet

You can connect headphones with a 3.5mm plug (not included) to your tablet. The headphone socket can be found on the device highlighted with . When you have headphones connected, the tablet speakers are switched off and all sound is sent via the headphones.

Installing a Micro SDHC/XC card

Your tablet supports Micro SDHC and SDXC cards (not included) for additional storage of data and files.

 **Important:** Use only compatible memory cards approved for use with this device. Incompatible cards may damage both the memory card and the tablet and may corrupt data stored on the card. To install a Micro SDHC/SDXC memory card:

1. Locate the Micro SDHC/SDXC card slot on the tablet.
2. Insert the Micro SDHC/SDXC card into the slot, carefully slide the memory card into the slot, pushing gently until it clicks into place.

 
 
Note: To remove a memory card, push the memory card gently until it clicks and the spring will push the card out to allow you to remove it from the tablet.

 **Important:** Do not remove a memory card when files are currently being used by the tablet. This may corrupt or lose the data stored on the memory card.

Using the kickstand

The integrated kickstand can be used to position the tablet to a more suitable viewing angle to make using the tablet easier.

To use the kickstand, locate the recess in the bottom left and bottom right corners, towards the rear of the tablet, and push or pull the tablet stand until it clicks into the desired position.

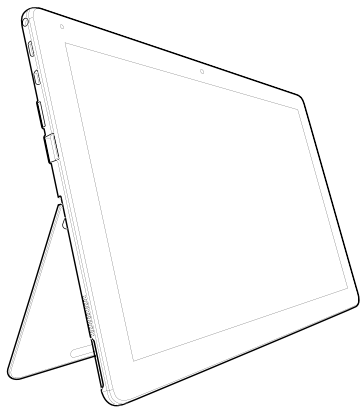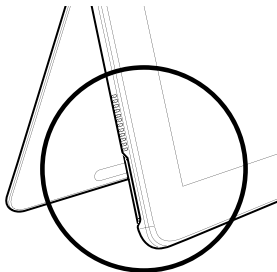

Important: Do not use excessive force when setting the kickstand angle or push down on the tablet when stood using the kickstand. This may damage the tablet and can cause the kickstand to stop working correctly.

Using Windows 10 Home

 
For a quick introduction to Windows 10 Home and up-to-date guides to help you get more from your tablet, please visit our support page at: support.linxtablets.com

Using the Keyboard Cover

Connecting to your tablet

Important: Before connecting the tablet with the Keyboard Cover for the first time, please turn on your tablet and wait for the boot process to be completed and the Windows desktop to finish loading.

1. Place the Keyboard Cover onto a firm surface for support when docking your tablet.
2. Connect the tablet to the Keyboard Cover by locating the Pogo Pin connection and placing your tablet into the docking slot.

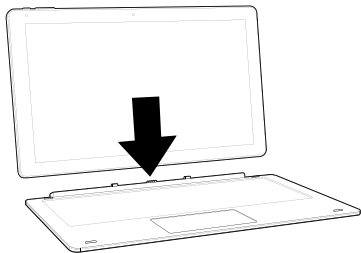

Windows will now automatically detect the connection and begin to set up your accessory. Please **DO NOT** undock the tablet during this process.

Note: The time taken to automatically detect and setup the Keyboard Cover can vary depending on the hardware configuration, number of applications running and number of external devices connected to the tablet. Please be patient during this process.

3. After the auto-detection and setup of the Keyboard Cover is complete, a confirmation prompt will display on your tablet.

Your Linx Keyboard Cover is now successfully set up with your tablet and is ready-to-use.













Note: When you have successfully set up the keyboard for the first time, the setup process will not have to be run again when docking your tablet into the keyboard, making it faster and easier to use.

Using the function keys

Additional enhanced function keys provide shortcuts to useful functions, such as volume levels and screen brightness. To use the enhanced functions, first **press and hold** the 'Fn' key; then press the function key that you wish to use.

Note: The additional functions have been printed on the keyboard in blue to provide a clear visual difference when using the keyboard.

Note: The numerical functions require the 'number lock' function to be enabled before use.

Icon	Function Description	Key Combination
	Lock screen	Fn + Esc
	Mute volume	Fn + F1
	Volume down	Fn + F2
	Volume up	Fn + F3
	Play/Pause	Fn + F4
	Open web browser	Fn + F5
	Open email	Fn + F6
	Search	Fn + F7
	Open share function	Fn + F8
	Search and connect to wireless device	Fn + F9
	Settings	Fn + F10
	Enable/Disable trackpad	Fn + F11
NumLk	Number Lock	Fn + F12
\	Backslash	Fn + Z
	Vertical bar/Pipe	Fn + X


0	Numeral 0 (after enabling number lock)	M
1	Numeral 1 (after enabling number lock)	J
2	Numeral 2 (after enabling number lock)	K
3	Numeral 3 (after enabling number lock)	L
4	Numeral 4 (after enabling number lock)	U
5	Numeral 5 (after enabling number lock)	I
6	Numeral 6 (after enabling number lock)	O
7	Numeral 7 (after enabling number lock)	7
8	Numeral 8 (after enabling number lock)	8
9	Numeral 9 (after enabling number lock)	9
*	Multiply (after enabling number lock)	0
/	Divide (after enabling number lock)	P
-	Minus (after enabling number lock)	:
+	Add (after enabling number lock)	?
■	Decimal (after enabling number lock)	>

Using the touchpad

The multi-gesture touchpad allows you to navigate Windows without the need of a mouse:


Moving

 To move the cursor, move your finger around the touchpad




Clicking

 To click, tap on the touchpad once or press the left-click button

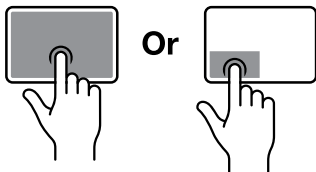


Double-clicking

 To double-click, double-tap on the touchpad or press the left-click button twice

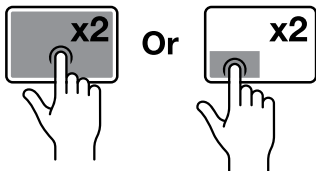


Right-clicking

 To right-click, tap on the touchpad with two fingers or press the right-click button

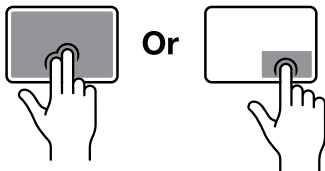


Horizontal or vertical scroll

 To scroll horizontally or vertically in the same way that a mouse wheel can be used, tap on the touchpad with two fingers and slide either up/down or left/right on the touchpad.




Zooming in or out

To zoom in to an image, map or part of a webpage spread two fingers apart on the touchpad. To zoom out, pinch two fingers together.

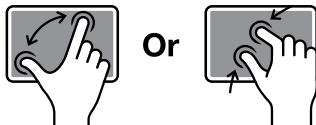 

Dragging an item or icon

 To move items to a new location, press **and hold** the left-click button and drag to the desired location by moving your finger around the touchpad.

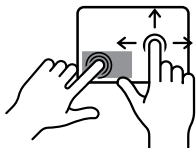

Alternatively, you can double-tap **and hold** the item, and then drag to the desired location.

Quickly start a search

To quickly start a search, tap on the touchpad using three fingers.



Quickly open the action centre

To quickly open the action centre, tap on the touchpad using four fingers.



Additional multitasking gestures

To use the additional multitasking gestures, use three fingers on the touchpad to slide in from any direction.

Technical information.

Tablet.

Physical Properties.

Dimensions (HWD)	314.7 × 189 × 10.7mm
Primary Orientation	Landscape
Screen Size	12.5" (Diagonal)
Screen Resolution / Aspect Ratio	1920 × 1080 / 16:9
Touch Module	10-Point Capacitive Touch Panel
Battery Type	Rechargeable Lithium-ion Polymer
Battery Capacity	9,000mAh / 3.7V
Battery Life	Up to 5-7 Hours / Approx. (Dependent on use)

System Hardware Configuration.

CPU Type	Intel® Atom™ x5-Z8350
Clock Speed	Quad-Core, 1.44GHz - 1.92GHz, 2MB Cache
GPU	Intel® HD Graphics (Generation 8)
RAM	4GB LPDDR3 SDRAM
ROM Flash	64GB eMMC
Camera	2.0 Megapixel (MP) CMOS (Front) 2.0 Megapixel (MP) CMOS (Rear)
Speaker(s)	2 x Built-in 8Ω / 0.8W Speakers
G-Sensor	Gravity Acceleration Sensor
Microphone	Built-in

Network Connections.

Wi-Fi	Wi-Fi 802.11 ac/a/b/g/n, Dual Band 2.4GHz and 5.0GHz
Bluetooth Version	Bluetooth 4.0

Technical information.

Interface Configuration.

Expandable Memory Slot	Supports Micro SDHC/XC up to 128GB. Note: Some Micro SDHC/XC card capacity/speed specifications may not be compatible.
USB	1 x Full-size USB 3.0 (Type-A) 1 x Micro USB (Type-B)
Headphone Jack	3.5mm Headphone Port
HDMI	Micro HDMI 1.4
Keyboard Support	5-Pin Connector to Keyboard Cover USB Bluetooth Wired / Wireless
Mouse Support	USB Bluetooth Wired / Wireless

Included Accessories.

Power Adaptor	Mains Charger with integrated Micro USB (5V / 2.5A)
---------------	---

Software Configuration.

Operating System	Windows 10 Home
------------------	-----------------

Note: Specifications and external appearance are subject to change without notice.

Technical information.

Keyboard Cover.

Physical Properties.

Dimensions (HWD)	314 × 207 × 5mm
Keypad Format	UK, QWERTY
Key Style	Island-style keys
Key Lifespan	More than 3 million uses per key
Touchpad	Capacitive touchpad controller
Gesture Support	Yes
Cradle Style	Open hinge with Support Mounts

Technical Details.

Connectivity Interface	5-Pin Pogo Pin
Power	Pogo Pin : DC 5V / 0.5A (Max.) Operating Current : 11mAh Standby Current : 1.5mAh

Required Products.

Compatible Tablet(s)	Linx 12X64 (LINX12X64/BUN)
----------------------	----------------------------

Software Configuration.

Compatible Operating System	Windows 10 Home
-----------------------------	-----------------

Note: Specifications and external appearance are subject to change without notice.

Important safety information.

Your tablet should be treated with care. The information below has been provided in the interest of safety and will help you to enjoy this product and the benefits it brings for many years.

General use

DO NOT use or press down on the Tablet screen with any sharp objects, they may scratch or damage the LCD screen.

DO NOT place the Tablet on an uneven or unstable work surface.

DO NOT use harsh chemicals, cleaning solvents or detergents to clean the product. Wipe with a dry soft cloth or tissue paper to clean. Disconnect the Tablet PC from the electrical outlet and remove any installed batteries or accessories before cleaning.

DO NOT shove any foreign objects into the Tablet.

DO NOT attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.

DO NOT expose the Tablet to strong magnetic or electrical fields.

NEVER use your Tablet, and always disconnect your Tablet from the mains power supply, during an electrical storm.

DO NOT expose the Tablet to direct sunlight, or leave the Tablet facing the sun for long periods of time as it can damage the LCD Screen.

SAFE TEMP: This Tablet should only be used in environments with ambient temperatures between 0°C and 40°C

The underneath and sides of the product may become warm after a long period of use. This is normal.

CAUTION: This Tablet has some metal parts to disperse heat.

DO NOT block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.

DO NOT leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.

DO NOT leave it in high temperatures as electronic devices and plastic parts may warp in heat.

DO NOT leave the Tablet on your lap or any part of the body in order to prevent discomfort or injury from heat exposure.

INPUT RATING: Refer to the rating label on the Tablet and be sure that the Power Adapter complies with the rating. Only use the Power Adaptor that came with the product. Using an unauthorised power supply will invalidate your warranty and may irreversibly damage the product.

CAUTION: When the Power Adaptor or an appliance coupler is used and then disconnected, the Tablet shall remain with an electronic charge until power is drained.

Check the connections between any accessories and the Tablet before turning on.

DO NOT insert anything into the Tablet PC that may result in short circuit or damage the circuit.

Recycling

Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help to prevent uncontrolled waste disposal and promote the recycling of materials. All materials of the device can be recovered as material and energy.

DO NOT throw the Tablet in municipal waste. Check local regulations for disposal of electronic products.

Disposal of Waste Electrical & Electronic Equipment (WEEE)



This symbol on the product or on its packaging indicates that this product **should not** be treated as household waste. Instead it should be handed over to a suitable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more information about the recycling of this product, please contact your local council office, your household waste disposal service or the shop where you purchased the product.

Digital Rights Management

When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights. Copyright protection may prevent you from copying, modifying, or transferring photos, music, and other content.

Rechargeable Lithium-Ion battery

This device has an internal, non-removable, rechargeable Lithium-ion polymer battery. Do not attempt to open the back cover or remove the battery, as you may damage the device. To replace

the battery, take the device to the nearest authorised service facility.

Only use the power supply that came with the product. Using an unauthorised power supply could invalidate your guarantee and may irreversibly damage the product.

The battery can be charged and discharged hundreds of times, but it will eventually wear out. When battery life is noticeably shorter than normal, to replace the battery, take the device to the nearest authorised service facility.

CAUTION: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Battery and charger safety

To unplug a charger or an accessory, hold and pull the plug, not the cord.

When your charger is not in use, unplug it.

If your Tablet is left unused on standby, a fully charged battery will still lose its charge over time.

The Tablet internal battery operates best at temperatures between 59°F and 77°F (15°C and 25°C). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily.

Do not dispose of batteries in a fire as they may explode. Obey local regulations. Recycle when possible. Do not dispose as household garbage. Do not dismantle, cut, crush, bend, puncture, or otherwise damage the battery in any way. If a battery leaks, do not let liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help.

Small children

Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

Medical devices

Operation of radio transmitting equipment, including wireless phones, may interfere with inadequately shielded medical devices' function. Consult a physician or the medical device's manufacturer to determine if it is adequately shielded from external radio energy.

Implanted medical devices

To avoid potential interference, manufacturers of implanted medical devices recommend a minimum separation of 6 inches (15.3 centimeters) between a wireless device and the medical device. Persons who have such devices should:

- Always keep the wireless device more than 6 inches (15.3 centimeters) from the medical device.
- Turn the wireless device off if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Hearing



Warning: When you use a headset or earphones, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

To prevent possible hearing damage, do not listen to audio at high volume levels for extended periods of time.

Warranty.

For the purpose of this warranty, references to “Supplier” mean Exertis (UK) Limited who is the supplier of the warranty; references to “Tablet” mean the tablet which this Warranty accompanies, the details of which appear at the end of this document; references to “You” and “Your” means you the owner/purchaser of the Tablet.

Supplier warrants to You that this product will be free from defects in materials and workmanship in the course of normal use for a period of 12 months (or 6 months for batteries) from the date of purchase. This guarantee covers breakdowns due to manufacturing or design faults. If a genuine fault is found that is covered under this warranty, Supplier's obligation shall be to repair or replace the Tablet or any components free of charge to You.

The guarantee is subject to the following provisions:

- The warranty does not cover accidental damage, however caused, wear and tear, or negligence.
- The Tablet must be solely used for domestic purposes.
- The warranty will be rendered invalid if the product is re-sold or is damaged through any adjustment, modification or repair not authorised by Supplier or its Authorised Service Centres.
- Specifications of both Tablet and warranty terms are subject to change without prior notice.
- Supplier makes no warranty or representation to any pre-installed software, its quality and performance, or that the operation of the software will be uninterrupted or error free.
- Supplier will not be liable for damage to, or loss, of data stored on the Tablet. It is Your responsibility to make a full backup of your data.
- Supplier will not be responsible for loss of, or damage to, additional accessories such as

removable storage media.

- The Supplier disclaims any liability for the incidental or consequential damages.
- The warranty is in addition to and does not diminish your statutory or legal right.

In the unlikely event of experiencing any anomalies with Your Tablet, please visit our support website at **support.linxtablets.com** for further guidance.

Supplier:

Exertis (UK) Limited,
Shorton Brook Way,
Altham Business Park,
Altham,
Accrington,
Lancashire.
BB5 5YJ

Trademarks

Linx, the Linx logo, Exertis, and the Exertis logo are trademarks or registered trademarks of Exertis (UK) Limited.



December 2016/Issue No. 3

